


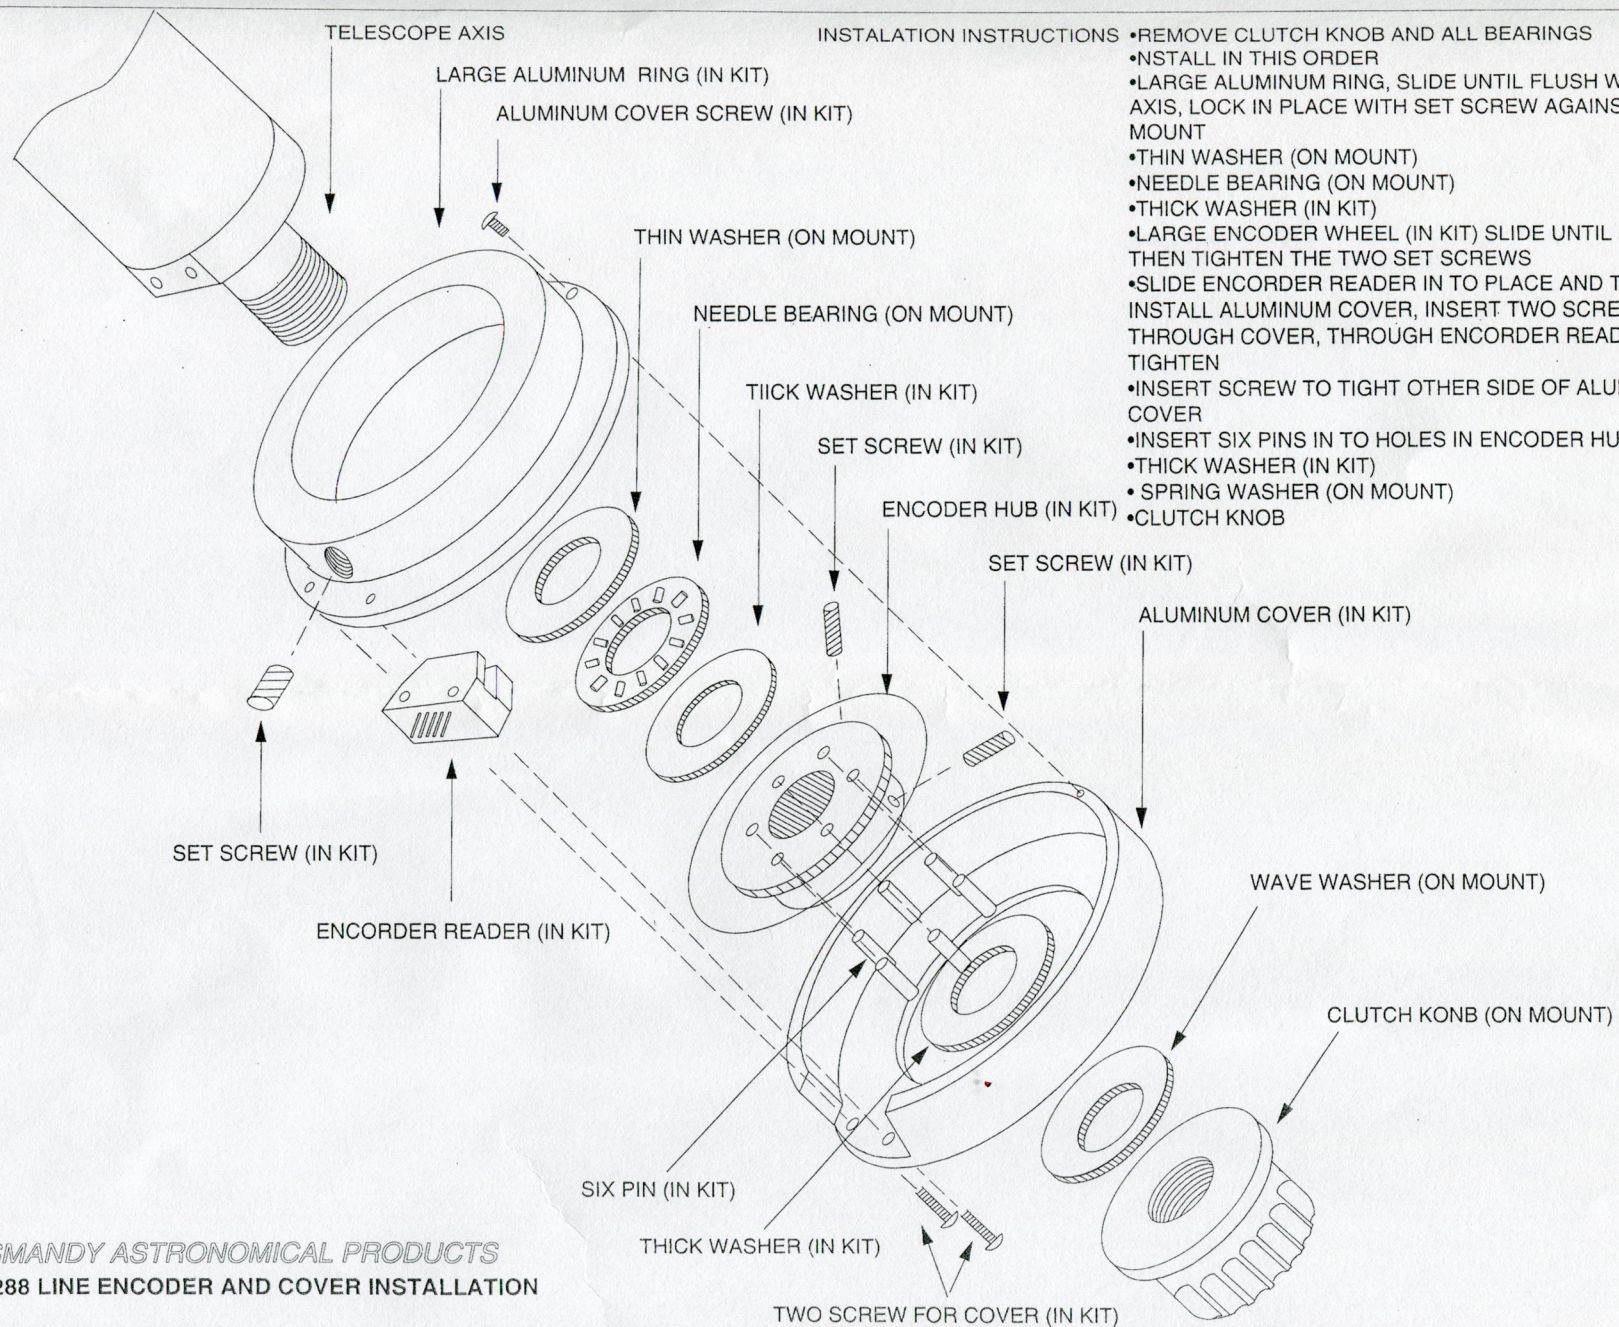

INSTALLATION INSTRUCTIONS

- REMOVE CLUTCH KNOB AND ALL BEARINGS
- INSTALL IN THIS ORDER
- LARGE ALUMINUM RING, SLIDE UNTIL FLUSH WITH END OF AXIS, LOCK IN PLACE WITH SET SCREW AGAINST FLAT ON MOUNT
- THIN WASHER (ON MOUNT)
- NEEDLE BEARING (ON MOUNT)
- THICK WASHER (IN KIT)
- LARGE ENCODER WHEEL (IN KIT) SLIDE UNTIL IT STOPS, THEN TIGHTEN THE TWO SET SCREWS
- SLIDE ENCODER READER IN TO PLACE AND THEN INSTALL ALUMINUM COVER, INSERT TWO SCREWS THROUGH COVER, THROUGH ENCODER READER AND TIGHTEN
- INSERT SCREW TO TIGHT OTHER SIDE OF ALUMINUM COVER
- INSERT SIX PINS IN TO HOLES IN ENCODER HUB
- THICK WASHER (IN KIT)
- SPRING WASHER (ON MOUNT)
- CLUTCH KNOB

LOSMANDY ASTRONOMICAL PRODUCTS
12288 LINE ENCODER AND COVER INSTALLATION